	 How do we connect devices 	
Locturos 10, 20	– In the same room?	
Lectures 19, 20	- In the next room? Cabling lin	nit
Bridges and switches	- In the next building? + Admin box	undary
Brian Carpenter	- In the next department + Funding b	oundary
	- In the next campus? + Political b	oundary
COMPSCI 314 S2C 2011	- In the next country?	
	 In the next continent? Distance, cost an numbers increase share costs and costs and costs 	e; must
COMPSCI 314	COMPSCI 314	

Topics (Shay 10.1 - 10.4)


- Repeaters
- Hubs
- Bridges
 - Spanning tree algorithm
- Ethernet switches
 - Virtual LANs
- The need for routing

Repeaters

• A repeater simply reshapes, amplifies and sends on the signal

Repeaters to Routing

 Useful when cable length is enough to degrade the signal, or to safely connect two cable segments



Degraded signal

Regenerated signal

- An Ethernet repeater works in both directions

Hubs



- A hub is (in the simplest case) simply a multiport repeater.
- A signal coming in on any port is reshaped, amplified, and sent out on all the other ports
- But *hub* is a very general word, so people sometimes speak of *bridging* or *switching* or even *routing* hubs.
- However, if it costs \$20 it's only a repeating hub.

Limits on hubs and repeaters

COMPSCI 314

- Hubs and repeaters are essentially cable extenders.
 - They add slightly to transmission delay.
- In Ethernet, they form part of the collision domain calculation, as we saw earlier.

OK, maybe \$27.81...



This handy USB cup warmer plugs into your computer to keep your drink warm. Features include 4 port USB hub, when connected to computer the LCD blue back light is activated, clock, alarm and temperature. This handy USB cup warmer plugs into your computer to keep your drink warm. Features include 4 port USB hub

from: **\$27.81** per unit

5

7

Advantages and disadvantages of hubs and repeaters

- + Nothing to configure.
- + Cheap and reliable.
- + Regenerate degraded signals.
- Don't avoid Ethernet contention/saturation problems on shared LANs.
- Don't split up the collision domain, therefore subject to distance limits.

Bridges


- Although bridges are little used today, they are important to understand before we discuss switches.
- Consider a situation where we need to connect two Ethernets, but using a simple repeater would exceed the collision domain limit:

Source	1) 10 Mb/s, 2 km	
2) 10 Mb/s, 2 km	Dest.	

 What must we do to avoid joining the two collision domains into one? COMPSCI 314

Bridges (3)

- How does the bridge know when to resend a packet?
 - In the simple case of two Ethernets, it could just resend everything it sees ("flooding").
 - But with several Ethernets and bridges, that gets too noisy, since every packet will be sent through every bridge to every other Ethernet.

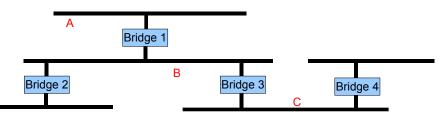

Bridges (2)

- The trick is to read the packet off one Ethernet and then send it on the other one quite independently.
 - The bridge pretends to be the destination on network 1 and then pretends to be the source on network 2.
 - Reading a packet on Ethernet is a passive operation (the receiver sends absolutely nothing).
 - When sending the packet out again on network 2, the bridge uses the same source MAC address as the original sender on network 1, instead of its own MAC address.
 - Any station that sees the re-sent packet cannot tell that it came from a bridge.
 - Will any bits be different?
 - Does the bridge need to re-calculate the FCS?

COMPSCI 314

10

Bridae 1

port numbers in a real case. 12

JSouth

Bridges (4)

- Conclusion: bridges must know where each **↑North** Ethernet station is, and only send packets in that direction.
- Each bridge needs a routing table. For Bridge1:

From No	From North		From South		
Dest. addr.	Send to:	Dest. addr.	Send to:	Bridge 3	
A	(Local)	A	North		
В	South	В	(Local)	↓S	
C	South	С	<u>(Local)</u>	'North' and 'South' will be	

No need to send packets again locally

11

How bridges learn

- At start-up, a bridge knows nothing (routing table is empty).
- · Suppose it sees a packet on its North port, with destination B and source A.
- It now knows that A is to the north, so it can insert

(Local) Α North


A

- It still knows nothing of B, so the only choice is 'flooding': re-send the packet on its South port. All bridges do the same.
 - If B was in fact North, the re-sent packet would be wasted.
- If it sees a packet with destination C and source A, it learns nothing new and continues to flood.
- When a reply comes from B to A on its South port, it inserts B South R (Local)
- → Try exercise 2 on Shay page 521. In a real example, the (Local) entries are not needed. COMPSCI 314

The spanning tree algorithm in brief

- To avoid loops and duplicates we need a map of some kind. Bridges use a spanning tree.
 - In graph theory, a spanning tree is a set of edges of a graph that form a tree and includes every vertex.
 - The spanning tree protocol is standardised as IEEE 802.1D
- Bridges send management packets to each other.
- One bridge is "elected" as the root.
- Each bridge determines which port is closer to the root.
- The bridges on each LAN elect one bridge as the designated bridge which will send frames towards the root. Again, this is based on distance from the root.


Making the problem a little harder

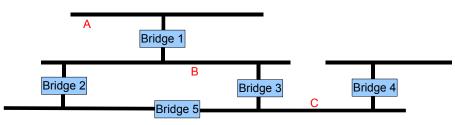

- How do we prevent packets being sent twice or even in loops, when A sends to C?
 - Flooding and learning are not enough: both B2 and B3 will learn that C is to the south.
 - B2 must ignore packets for C on its North port. _
 - The bridges must talk to each other, to eliminate duplicate paths.

COMPSCI 314

The spanning tree result

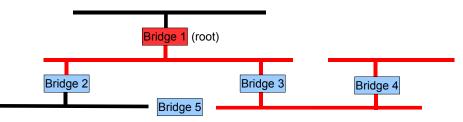

- Bridge 5 is idle, but there are no duplicates or loops.
 - Some shortest paths would use Bridge 5.
 - The spanning tree does *not* optimise paths.
- If Bridge 3 fails, the spanning tree will reconfigure and Bridge 5 will take over.

COMPSCI 314

- Routing tables and spanning tree must be timed out and refreshed periodically to deal with changes in the network 16

13

Advantages and disadvantages of bridges


- + Self configuring. (With spanning tree, any old network design will work the easy way to split up a big LAN.)
- + Fairly cheap and reliable.
- + Overcome distance limit, regenerate degraded frames.
- Don't cure Ethernet saturation on busy LANs.
- Suit old-fashioned shared cable better than star cabling.
- Notorious for allowing "broadcast storms" despite the spanning tree. (All bridges must forward multicast and broadcast packets.)
- Generally hard to operate and manage large bridged networks.

17


19

Switch internals

- Switches vary widely in internal design (and price)
- The ideal switch can run full duplex at line speed on every port.
 - In our 33 port example, that would mean 32 100 Mb/s flows in and out. 10 each way could be using the 1 Gb/s port.

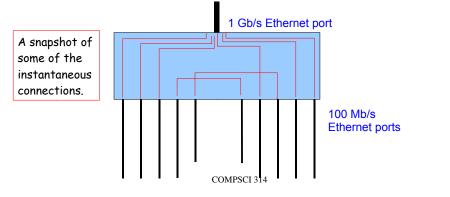



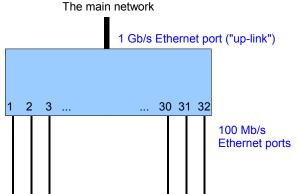

- Functionally, this switch will behave exactly like a 33 port bridge.
 - Routing table with 33 port numbers instead of 2
 - Spanning tree when several switches are connected together COMPSCI 314

Read the small print

- You can't tell from looking if a device is a switch or a hub.
- You can't tell from looking if a switch can run full speed on all ports, or if its internal design limits it to N frames per second or N simultaneous frames.
- In any case, 32x100 won't go into 1000. What happens if everyone sends to the "up-link" at the same time?
 - Does the switch queue excess packets, discard them, cause a collision, or apply some kind of flow control?

Example of small print

- 24 RJ-45, 10/100 Mbps Ethernet LAN ports
- Maximum Bandwidth:
 - Full duplex: 200 Mbps (for 100BASE-TX), 20 Mbps (for 10BASE-T)
 - Half duplex: 100 Mbps (for 100BASE-TX), 10 Mbps (for 10BASE-T)
- Operates at maximum forwarding rate and provides frame filtering and forwarding functions for each port
 - 14,880 packets per second for 10 Mbps ports
 - 148,800 packets per second for 100 Mbps ports
- · Store-and-forward scheme to forward packets
- MAC address table: 4096 entries
- Packet buffer: 256 KB
- IEEE 802.3x Flow Control
 - Half-duplex: Back pressure
 - Full-duplex: Pause frame

"24 Port 10/100 Mbps Switch" (around 2007)

USRobotics:

21

Running the numbers


- "14,880 packets per second for 10 Mb/s ports"
- That means 10,000,000 / 14,880 bits per packet
- That's 672 bits per packet, or 84 bytes per packet.
- Ethernet packets are up to 1500 bytes, and more typically ~500 bytes.
- If we assume an average of 500 bytes/packet, that's 4000 bits/packet, which at 10 Mb/s means 10,000,000 / 4000 packets/s
- → That's about 2500 packets per second, well below the switch capacity.
- "Packet buffer: 256 KB"
- That will hold about 500 typical packets. Suppose ten ports all fire packets at full speed towards the same port. 500 packets will arrive in 1/50 of a second (20 msec) but will take 200 msec to send on.
- Is the packet buffer big enough?
- In general, whether a switch is suitable depends on the expected traffic load. Obviously, switches with greater throughput cost more money.

Advantages and disadvantages of switches


COMPSCI 314

- + Self configuring.
- + Reliable.
- + Overcome distance limit, regenerate degraded frames.
- + Avoid Ethernet contention/saturation problems on shared LANs or simple hubs.
- + Suit modern UTP5 (or optical fibre) cabling.
- Require systematic design and cable management.

Network for a large office or lab

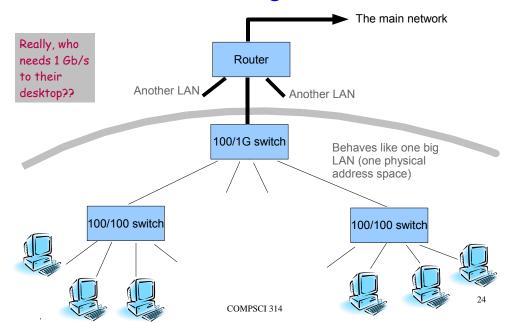

Two buildings

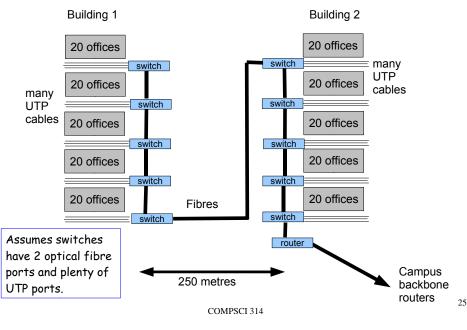

802.1q VLAN header

_	7	1	6	6	2	46-2	1500	4
	preamble	start of frame delimiter	destination address	source address	Ethertype	data	pad	frame check sequence

VLAN header inserted to replace Ethertype

Ethertype = 8100 ₁₆	Control bits + VPN ID#	Original Ethertype
--------------------------------	---------------------------	-----------------------

- Adds 4 bytes (included in FCS)
- Hidden from software
 COMPSCI 314

Virtual LANs (VLANs)

- A technique for mixing two or more usages of Ethernet on one physical infrastructure (cables and switches).
- Imagine inserting an extra byte at the beginning of every Ethernet frame that contains "1" or "2".
 - User ports configured in VLAN #1 will send frames with "1" and can only receive frames with "1"
 - Ditto for VLAN #2
 - Switches handle both VLANs
 - Magic! We now have two LANs on one set of cables and switches
- Actual VLANs are a bit more complex than this, as defined in the IEEE 802.1q standard.

COMPSCI 314


26

28

When to use VLANs

- Two populations of users mixed in the same area
 - if there are serious data privacy concerns
 - if one or both is generating a lot of multicast traffic
- Two very different types of traffic in the same area that can easily be separated
 - e.g. Voice over IP versus general usage
- Exceptionally, if there's a need to "stretch" a particular special LAN between buildings, and there no spare cable or equipment
- But always ask whether virtual traffic separation is really going to be an advantage
 - The data are still sharing the same cables and switches $_{\rm COMPSCI\,314}$

Two buildings, two populations

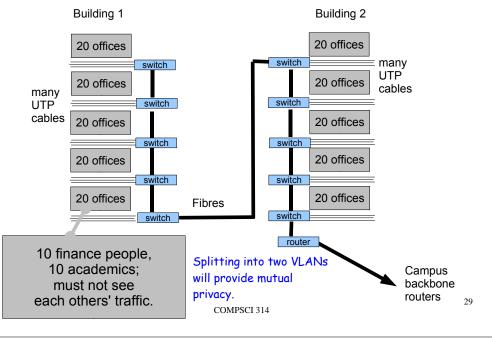

Repeaters to Routing

